


Rear view of your TV

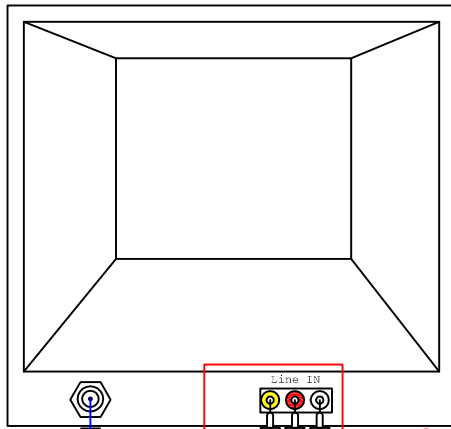



To "In from Antenna" in back of the TV. Tune your TV to the channel that the channel select switch on your VCR/DVR is set to.

If your TV is equipped with a A/V Input, you can utilize these jacks instead of the "Antenna IN" jack. Consult your TV manual on how to use the A/V input.


Channel select switch

Typical VCR/DVR

Typical Cable TV System Wallplate

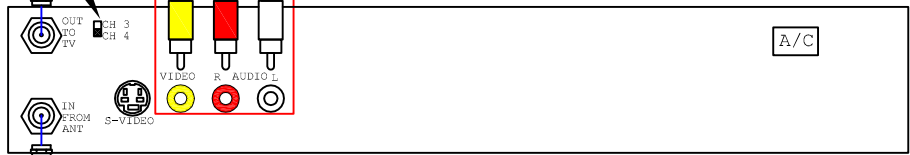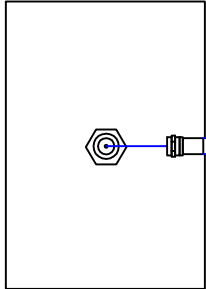

Rear view of your TV

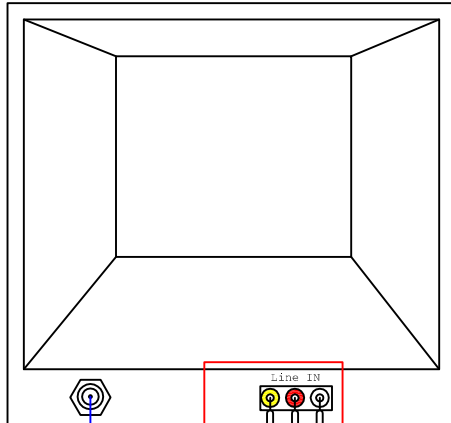

To "In from Antenna" in back of the TV.

Consult your TV manual on how to use the A/V input.

Typical Cable TV System Wallplate

